


STOP PLAYING A RECORDING

1. Press **STOP** at any time during a recording. The **STOPPED** screen appears.

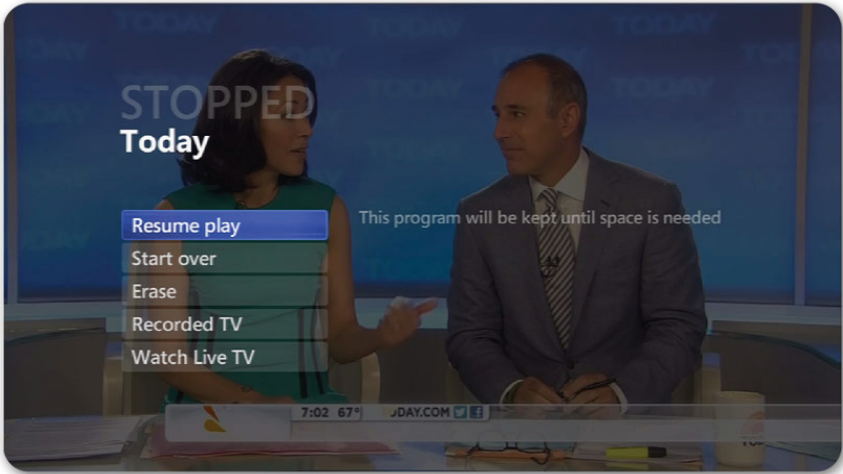

2. Use **UP/DOWN** to select an option. Press **OK** to make a selection. You can:

- Choose **RESUME PLAY** to continue watching the program where you left off.
- Choose **START OVER** to watch the program again from the beginning.
- Choose **ERASE** to stop watching the program and to delete it permanently.
- Choose **RECORDED TV** to stop watching the program and go back to your Recorded TV menu.
- Choose **WATCH LIVE TV** stop watching the program and return to live TV.

MENU

DVR

CONFLICT

APPDAILY

SETTINGS

HELP