





FAVORITES

To create favorites:


1. Press .
2. Use  to select **SETTINGS**, then highlight **TELEVISION**. Press .



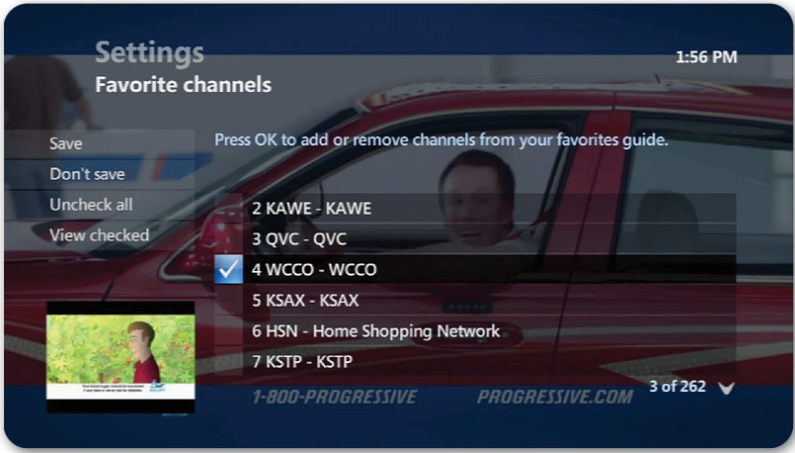
3. Use  to highlight **SET UP FAVORITES**. Press .




Tip: Once your favorites are set up, you can also access your favorites by pressing the  key on your remote.

FAVORITES (continued)

4. Use  to select channels.

- To add a channel to your favorites, press **OK**. A check mark will appear. Press **OK** again to remove it.



- To remove all channels, push  to select **UNCHECK ALL**. Press **OK**.
- If you wish to view only the channels selected in your favorites list, select **VIEW CHECKED**. Press **OK**.
- When done, select **SAVE** and press **OK**.
- To view your favorites guide, press **MENU**. Use   to select **<<LIVE TV>>**, then favorites. Press **OK**.

Tip: Each set top box has its own favorites list. A separate favorites list can be built for each set top box.