

MENU <<SETTINGS>>

To access the **SETTINGS**, press **MENU**. Use **>** to select **SETTINGS**.



GENERAL

To access **GENERAL** Settings, press **MENU**. Use **>** to select **SETTINGS**, then highlight **GENERAL** and press **OK**.



Select an option and press **OK** to edit the selected General Setting.

 
TELEVISION

To access **TELEVISION** Settings, press **MENU**. Use **>** to select **SETTINGS**, then highlight **TELEVISION**. Press **OK**.

See all of the television options below:




Customize channel guide

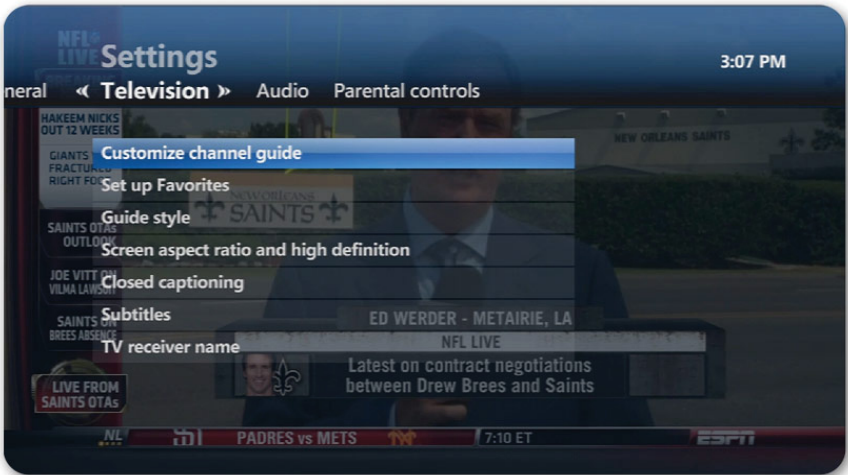
1. Select **CUSTOMIZE CHANNEL GUIDE**. Press **OK**.







 TELEVISION (continued)

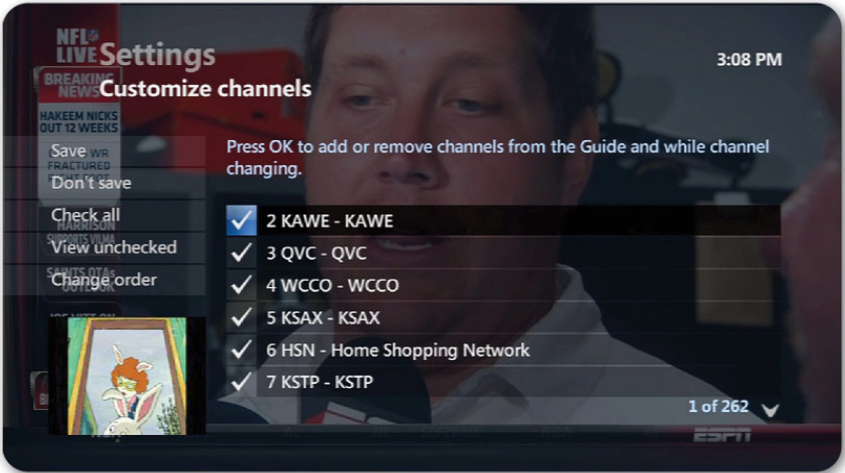Customize channel guide (continued)

- Use  to select channels. To hide a channel, press . The check mark will disappear. Press  again to remove it.



- To remove all channels, use  to select **UNCHECK ALL**. Press .
 - To see only your favorites list channels, select **VIEW CHECKED**. Press .
3. Select **SAVE** and press  to exit.

 
Set up Favorites

See [page 12](#).

TELEVISION (continued)


Guide Style

Allows you to view the guide in Grid (default setting) or Channel Lineup.

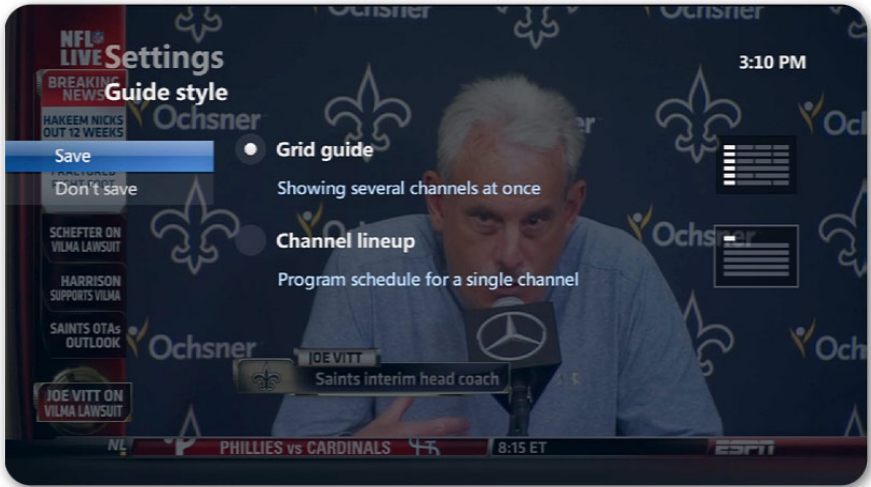

Screen aspect ratio and high definition

 Allows you to change the aspect ratio and resolution for your TV.

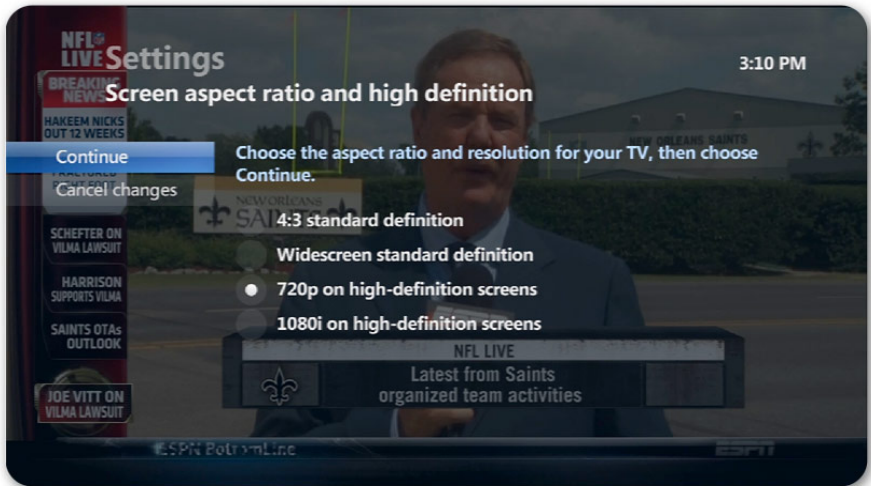


TELEVISION (continued)

Closed captioning

Set Digital closed captioning or standard closed captioning options.

Subtitles

 Turn subtitles on or off and select your preferred language.

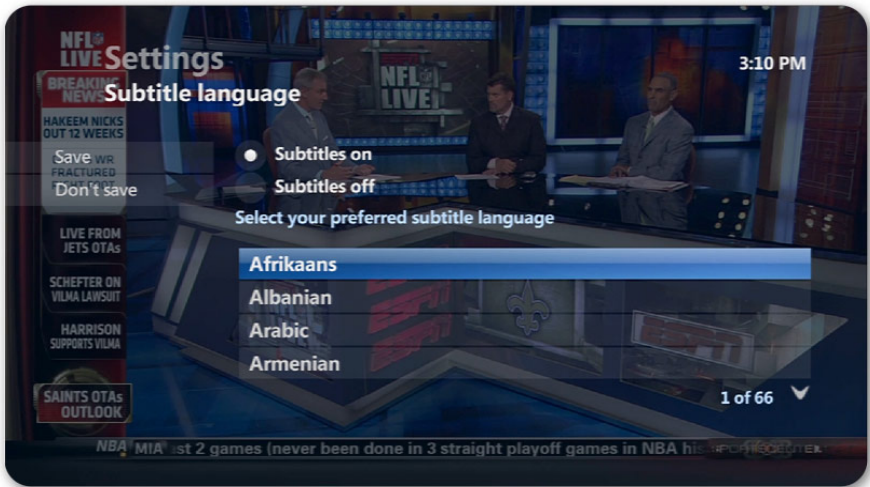

TV Receiver name

Displays the name of your CTCTV set top box.

AUDIO SETTINGS

Press **MENU**. Use the arrows to select **SETTINGS**, then **AUDIO**.

The **AUDIO** setting allows you to set Audio language, Secondary audio (if available), Audio description, and Digital audio output.

