

CTCTV Prime Remote Code Quick Guide

To Enter a Code Manually

1. Locate the Manufacturer and codes from the list provided
2. Turn on the TV
3. On the Remote, press and hold the **TV** button
4. On the Remote, press and hold the **OK** button
5. Release both keys at the same time
 - a. Mode keys (**STB, TV, DVD, AUX**) will blink twice if successful
 - b. If Mode keys do not blink, repeat to step 3.
6. Enter a four digit number matching the TV Manufacturer from the list provided
 - a. When successful, the **TV** Mode Key will blink three times
7. Test remote functions
8. If unsuccessful, repeat these steps until a suitable code has been found

To Program the Remote with the Automatic Search function

1. Turn on the TV
2. On the Remote, press and hold the **TV** button
3. On the Remote, press and hold the **OK** button
4. Release both keys at the same time
 - a. Mode keys (**STB, TV, DVD, AUX**) will blink twice if successful
 - b. If Mode keys do not blink, repeat to step 2.
5. Press the Numbers **922** on the Number Pad
 - a. When successful, the **TV** Mode Key will blink three times
 - b. If **TV** Mode Key does not blink three times, repeat to step 2.
6. Point the remote at your TV and slowly press and release the **Play** button arrow button (just to the right of the yellow **Pause** button)
7. When your TV turns off, press the **Power** key on the remote to send the current code. If the TV turns on, press the **Enter** Key (bottom right most key on the remote) to save the Code.
8. If the TV does not turn on, turn on the TV manually, then continue to press and release the **Play** button on the remote until TV turns off repeating to step 7.

Reset to Factory Settings

1. To reset the Remote to Factory settings *The remote will still work with the STB
 - a. Press and Hold the **STB** Button
 - b. Press and Hold the **OK** Button
 - c. Release Both keys
 - i. Mode keys (**STB, TV, DVD, AUX**) will blink twice if successful
 - d. Enter **900** on the keypad
 - e. The **STB** Mode key will blink Four times to indicate a successful reset

The following are a list of common codes by Manufacturer. If the code is not listed, refer to the extended documentation at <http://goo.gl/fPQ1jL> , or use the Automatic Search function.

Dynex

1593, 1589, 1507, 1609

Emerson

1465, 1020, 1043, 1135, 1028, 1023, 1036, 1333, 1024, 1118, 1595, 1027, 1382, 1145, 1121, 1150, 1106, 1512, 1101, 1102, 1018, 1011, 1022, 1124, 1749, 1120

GE

1000, 1094, 1049, 1135, 1333, 1021, 1063, 1512, 1068, 1558, 1380, 1153, 1385, 1386

Hitachi

1030, 1522, 1051, 1001, 1098, 1102, 1363, 1086, 1490, 1344, 1206, 1328, 1090, 1268, 1195, 1192

Insignia

1255, 1519, 1024, 1232, 1437, 1507, 1593, 1595, 1596, 1601, 1436

JVC

1023, 1092, 1054, 1055, 1169, 1526, 1026, 1080, 1615

LG

1255, 1020, 1333, 1257, 1539, 1146, 1584, 1638, 1303, 1723, 1294, 1293, 1718, 1701, 1720, 1721, 1332, 1722, 1327, 1307

Magnavox

1633, 1576, 1047, 1049, 1061, 1632, 1457, 1595, 1027, 1300, 1145, 1090, 1183, 1553, 1329, 1239, 1141, 1528, 1007, 1022, 1059, 1238, 1650, 1235, 1237, 1769 , 1217, 1286, 1751, 1747, 1740, 1230

Memorex

1043, 1023, 1032, 1333, 1001, 1022, 1593, 1121, 1305, 1165, 1725

Mitsubishi

1005, 1009, 1032, 1333, 1018, 1535, 1540, 1153, 1279, 1284, 1282, 1281

Panasonic

1466, 1096, 1469, 1049, 1169, 1554, 1010, 1564, 1385, 1305, 1165, 1123, 1651, 1654, 1659, 1655, 1657, 1664, 1670, 1663, 1730, 1713, 1666

Philips Magnavox

1772

Philips

1633, 1576, 1047, 1126, 1239, 1549, 1337, 1632, 1234, 1785, 1226, 1221, 1212, 1774, 1213, 1202, 1216, 1791, 1273, 1205, 1201, 1779, 1794, 1819, 1793

Pioneer

1469, 1102, 1149, 1377, 1336, 1339, 1342, 1343, 1346, 1338, 1345, 1335, 1334

Polaroid

1565, 1111, 1639, 1391, 1604, 1596, 1502, 1371, 1583, 1393, 1407, 1460, 1232, 1040, 1392, 1446, 1078

RCA

1144, 1000, 1094, 1049, 1009, 1640, 1613, 1610, 1596, 1459, 1386, 1385, 1153, 1380, 1586, 1558, 1552, 1548, 1546, 1068, 1149, 1118, 1067, 1065, 1082, 1102, 1018, 1220, 1426, 1804, 1801, 1758

Samsung

1314, 1073, 1156, 1333, 1061, 1161, 1173, 1547, 1530, 1172, 1169, 1490, 1363, 1011, 1098, 1018, 1360, 1375, 1418, 1355, 1321, 1366, 1367, 1349, 1318, 1356, 1405, 1313, 1399, 1358, 1369

Sansui

1023, 1024, 1064, 1593, 1090, 1121, 1382, 1114, 1256, 1263, 1251, 1269, 1252, 1260

Sanyo

1047, 1043, 1095, 1527, 1062, 1380

Sharp

1138, 1009, 1011, 1025, 1064, 1350, 1537, 1153, 1378, 1248, 1247, 1678, 1673, 1677, 1674, 1691, 1696, 1688, 1671, 1672, 1684, 1693, 1685, 1682, 1700, 1676, 1689, 1686, 1692, 1697, 1690

Sony

1037, 1219, 1534, 1574, 1090, 1388, 1408, 1515, 1814, 1812

Sylvania

1465, 1047, 1061, 1024, 1059, 1554, 1150, 1464, 1145, 1300, 1027, 1595, 1744, 1746, 1420, 1748, 1708, 1706, 1710, 1711, 1745

Toshiba

1159, 1043, 1058, 1223, 1255, 1073, 1222, 1532, 1340, 1550, 1169, 1012, 1341, 1560, 1179, 1377, 1267, 1114, 1006, 1154, 1597, 1408, 1473, 1470, 1509, 1647, 1820, 1646, 1835, 1821, 1429, 1447, 1444, 1458, 1462, 1496, 1486, 1471, 1510, 1449, 1513

Vizio

1829, 1433, 1181, 1184, 1042, 1824, 1289, 1625, 1822, 1823, 1831, 1649, 1828, 1705, 1832, 1833

Westinghouse

1515, 1135, 1184, 1544, 1555, 1178, 1567, 1616, 1816, 1198, 1199

Zenith

1037, 1255, 1094, 1020, 1023, 1333, 1061, 1522, 1051, 1015, 1118, 1054, 1001, 1090, 1121, 1382, 1207, 1716, 1301, 1717